


## For Fitting Beaded Frame Panels

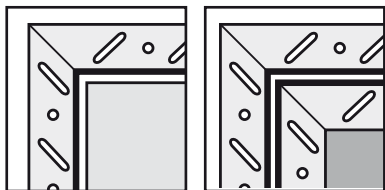

This instruction sheet contains the jointing and plastering instructions for finishing Exitile Access Panels with a simulated beaded frame and for panels that have a plasterboard door.

### For skim plastered ceilings and walls

Before application of a plaster skim finish, apply a self-adhesive scrim tape to the beaded frame overlapping onto the plasterboard surface. A skim coat of either Thistle Multi-finish or Thistle Board Finish can then be applied.

### For dry lining

Apply Gyproc Joint Filler or similar to the beaded frame and overlap onto the plasterboard surface. Bed Gyproc Joint Tape into the filler ensuring that the tape covers the junction between the beading and the plasterboard. Then apply a further coat of filler and feather down over a trowel width.

#### For Further Information:

Tel: +44 (0)24 7635 2771

Fax: +44 (0)24 7635 2761

E-mail: [sales@exitile.com](mailto:sales@exitile.com)

[www.exitile.com](http://www.exitile.com)